



1350 (53")






707 (27.8")

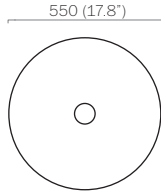

plywood dimensions

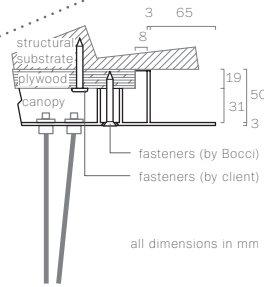

all dimensions in mm

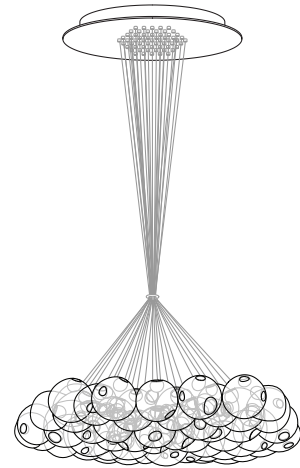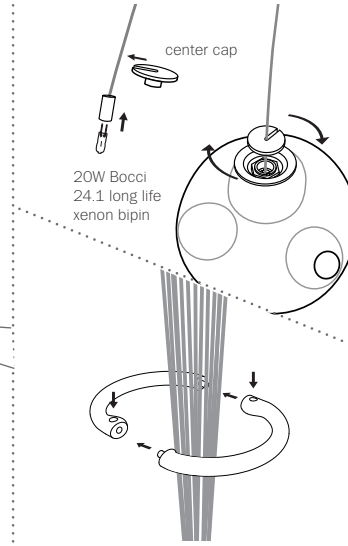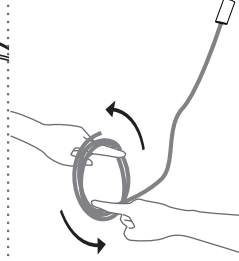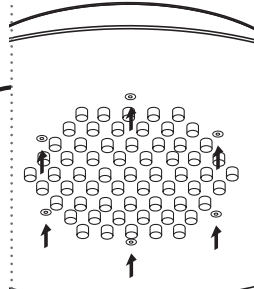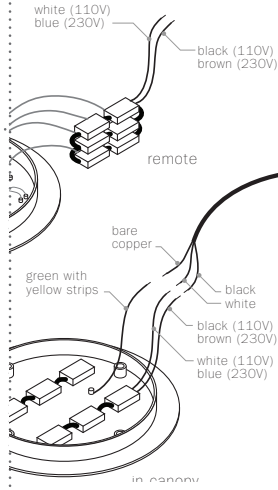

1

Measure and mark out the chandelier canopy position on the ceiling.

2

Note: The client is responsible for providing a robust 3/4" (19mm) plywood backing or wood blocking to securely anchor to the structural substrate.

Connections from the plywood to the structural substrate are the client's responsibility. Measure the plywood so that it fits within the canopy side walls (refer to detail above).

Anchor the plywood backing to the structural ceiling substrate.

3

Connect transformers inside the canopy to line voltage, ensuring to match black wire to black wire and white to white. For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box.

Note: As an option, Bocci recommends mounting transformers remotely in a close by, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure code compliance.

4

Anchor canopy into the plywood backing using the fasteners provided.

5

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

6

Each pendant terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. Plug in each pendant and turn the threaded sheathing into place by hand ensuring that it is adequately tightened. Tools are not required.

Bocci 24.1.2 long life bipin xenon lamps are included. Plug the lamp into the socket. Do not touch the lamp with your bare hands.

Remove the center cap from 28 pendant. Install 28 pendant by sliding the center cap onto the coaxial cable, gently insert the lamp into the pedant, then tighten the center cap connection by hand. Do not over tighten. Remove the protective film from the center cap after assembly.

Note: when using a dimmer for xenon use only low voltage electronic dimmer.

Prior to installing the ring around the coaxial cables, ensure that the pendants are composed in their intended hexagonal formation.

Gather the coaxial cables then install the ring with setscrews provided. Note: setscrews face up.

7

Adjust stainless steel ring to desired height.

Clean fingerprints from glass surfaces.

Turn fixture on.

* Purchase online for replacement lamps at www.bocci.ca/lamps

For additional assistance, please contact Bocci:

BOCCI Vancouver
info@bocci.ca
www.bocci.ca

BOCCI Berlin
europe@bocci.ca
www.bocci.ca

US patent # D687.740
Worldwide patents issued and pending.

Made in Vancouver, Canada

Approved to UL standards by CSA

