


1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

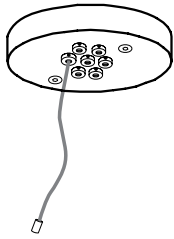

2

Determine the overall drop for the pendant fixture.

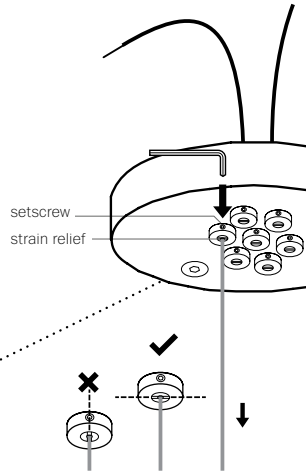


3

To thread the coaxial cables through the canopy, use the Allen key provided to loosen the setscrew in the canopy and gently feed the first cable through the canopy until you have reached your desired drop length. Use the Allen key to tighten the setscrew against the strain relief to secure the coaxial cable at its new length.

DO NOT OVERTIGHTEN.

Thread the remaining coaxial cables through the canopy in the same manner.


Note: The strain relief is the black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.
- RISK OF ELECTRIC SHORT!

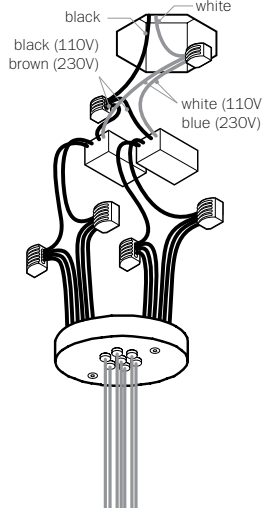

4


Connect the coaxial cable to the open slots in the terminal block on the 12V side of the transformers. Ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all the coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.

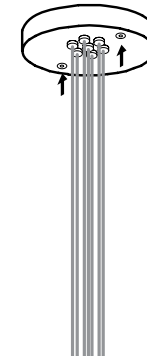

5

Tuck the transformer and wiring into the octagonal box, if available, and place canopy cover plate, lining up the fastener holes or connect directly to structural ceiling surface. Affix canopy cover with fasteners provided.

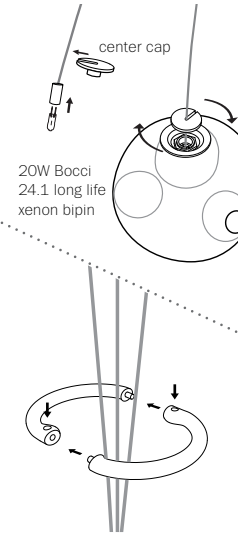

6

Remove the center cap from 28 pendant.

20W Bocci
24.1 long life
xenon bipin

Install 28 pendant by sliding the center cap onto the coaxial cable, gently insert the lamp into the pendant, then tighten the center cap connection by hand.


Do not over tighten.

Remove the protective film from the center cap after assembly.

Note: when using a dimmer for xenon, use only low voltage electronic dimmer.

Gather all the coaxial cables then install the ring with setscrews provided.

Note: setscrews face up.

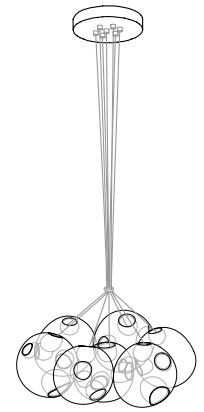

7

Clean fingerprints from glass surfaces.

Turn fixture on.

Purchase replacement lamps online at www.bocci.ca/lamps

* For additional assistance, please contact Bocci:

BOCCI Vancouver
info@bocci.ca
www.bocci.ca

BOCCI Berlin
infoeu@bocci.ca
www.bocci.ca

Worldwide patents issued and pending.

Made in Vancouver, Canada

Approved to UL standards by CSA



BOCCI

CLUSTER

28.7

Design by Omer Arbel
INSTALLATION INSTRUCTIONS

© 2010, Bocci Design and Manufacturing Inc. All rights reserved. These drawings and the information contained herein may not be reproduced, communicated to the public, or made available in whole or in part without prior permission. Any inquiries should be directed to the following email address: admin@bocci.ca.